

① Dismounting


Pay attention

Lever in
step off position


Pins Tool

Insert
NUT!


SPRING OUT
OF PINS RUN

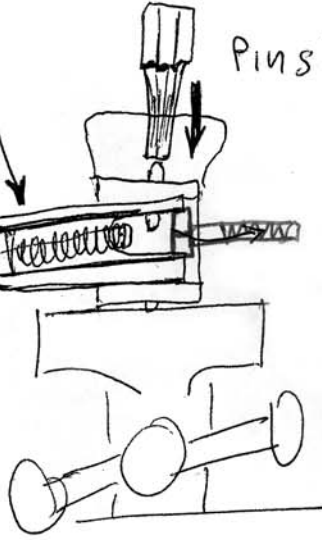


① 4 mm Drilling

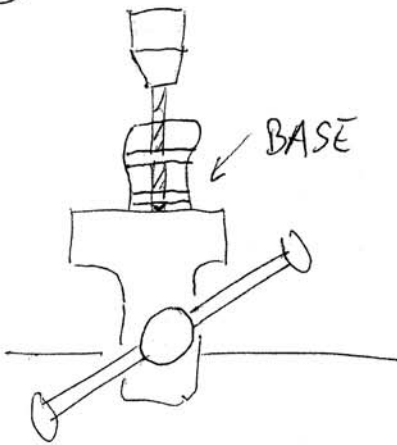


② 5 mm Drilling

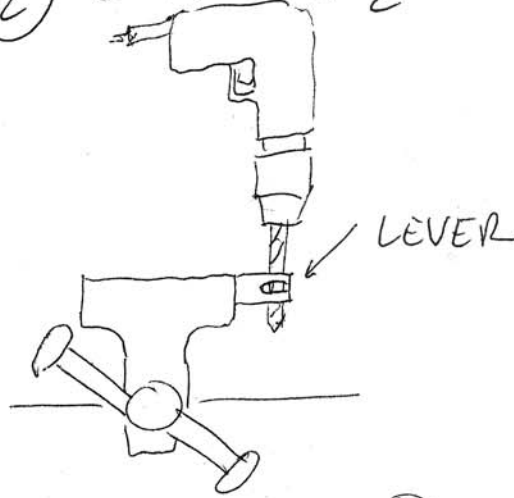

③ NUT
into the lever



④

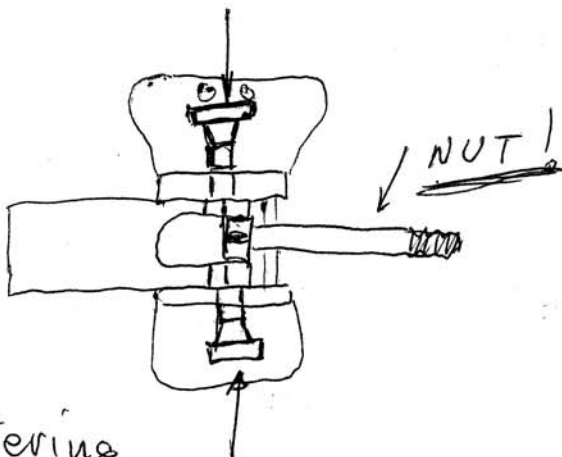

- centering
- Hand pins pushing

⑤ Pins pushing

